

INSTALLATION INSTRUCTIONS

LND55LKR-1 LINER KIT

BLACK REFLECTIVE GLASS LINER KIT	
Model 55	Description
DVLX(B,G)55BP90N-1	Single Sided, Black Reflective Glass

LEAVE INSTRUCTIONS WITH THE HOMEOWNER.

CARTON CONTENTS		
Part Number	Description	Quantity Supplied
R12954	Liner, Glass Reflective	9

TOOLS NEEDED: Phillips Screwdriver

INSTALL LINER

- Installation Of Glass Liner**
1. Remove barrier screen/ glass and glass assemblies. **(See the owner's manual for instructions.)**
 2. Remove the (4) screws from the infill. Lift the infill up, then pull it out from the firebox. Be careful not to scratch the side panels **(shown in Figure 1).**

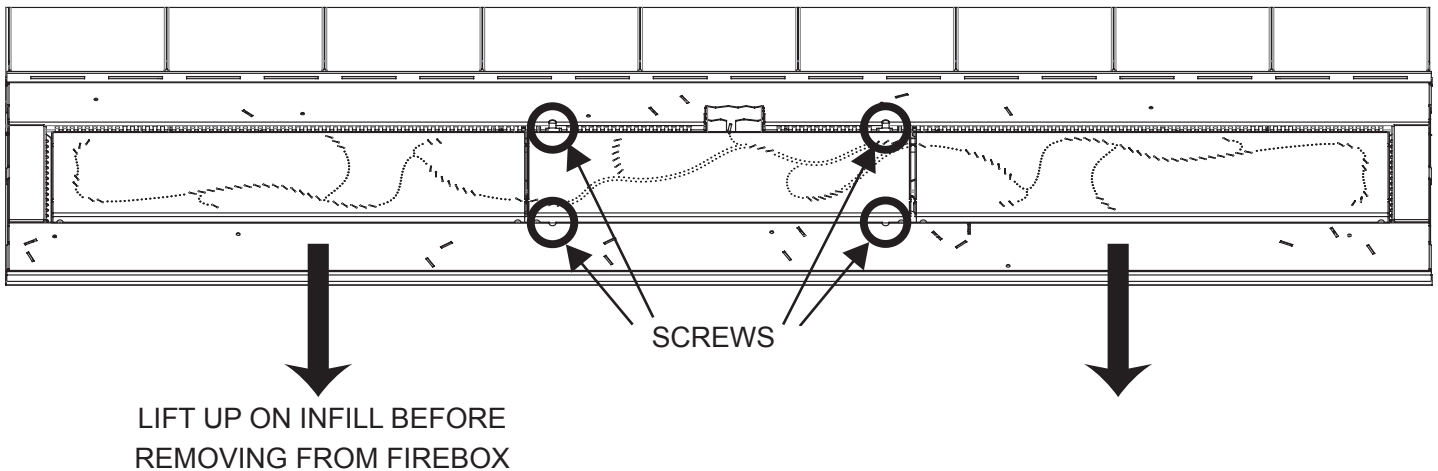


Figure 1

NOTICE: Video of liner installation available on our website at: www.empirecomfort.com.

Installation of Glass Liner

3. Remove (2) screws from the top piece holding the liners. Back the third screw just enough for the liners to be loose. Remove the (9) liners. Going from left to right, slide the BLACK REFLECTIVE LINERS into place. (See Figures 2 and 3.)


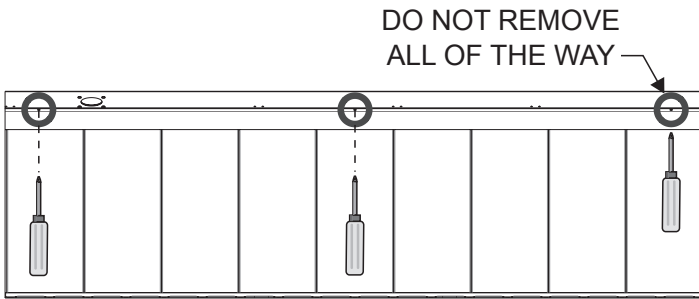


Figure 2

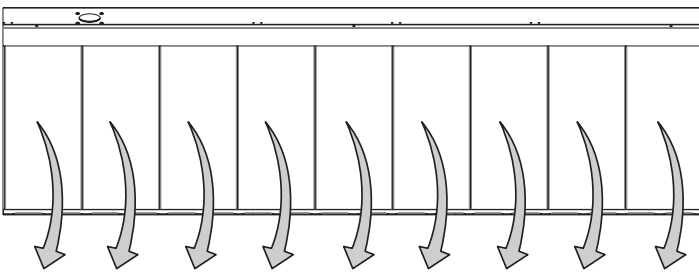

TILT EACH PANEL OUTWARD TO REMOVE FROM FIREBOX.

Figure 3

4. Reinstall the top piece to secure the liners to the firebox. Reinstall the infill, then the GLASS DOOR and SCREEN FRAME glass assemblies. **Liner kit installation is complete.**



SINCE 1932

www.empirecomfort.com

Empire Comfort Systems Inc.
Belleville, IL

If you have a general question about our products, please e-mail us at info@empirecomfort.com.

If you have a service or repair question, please contact your dealer.